


Assembly instruction

OKdo Jetson Nano 2 GB Metal Case



Included in the product

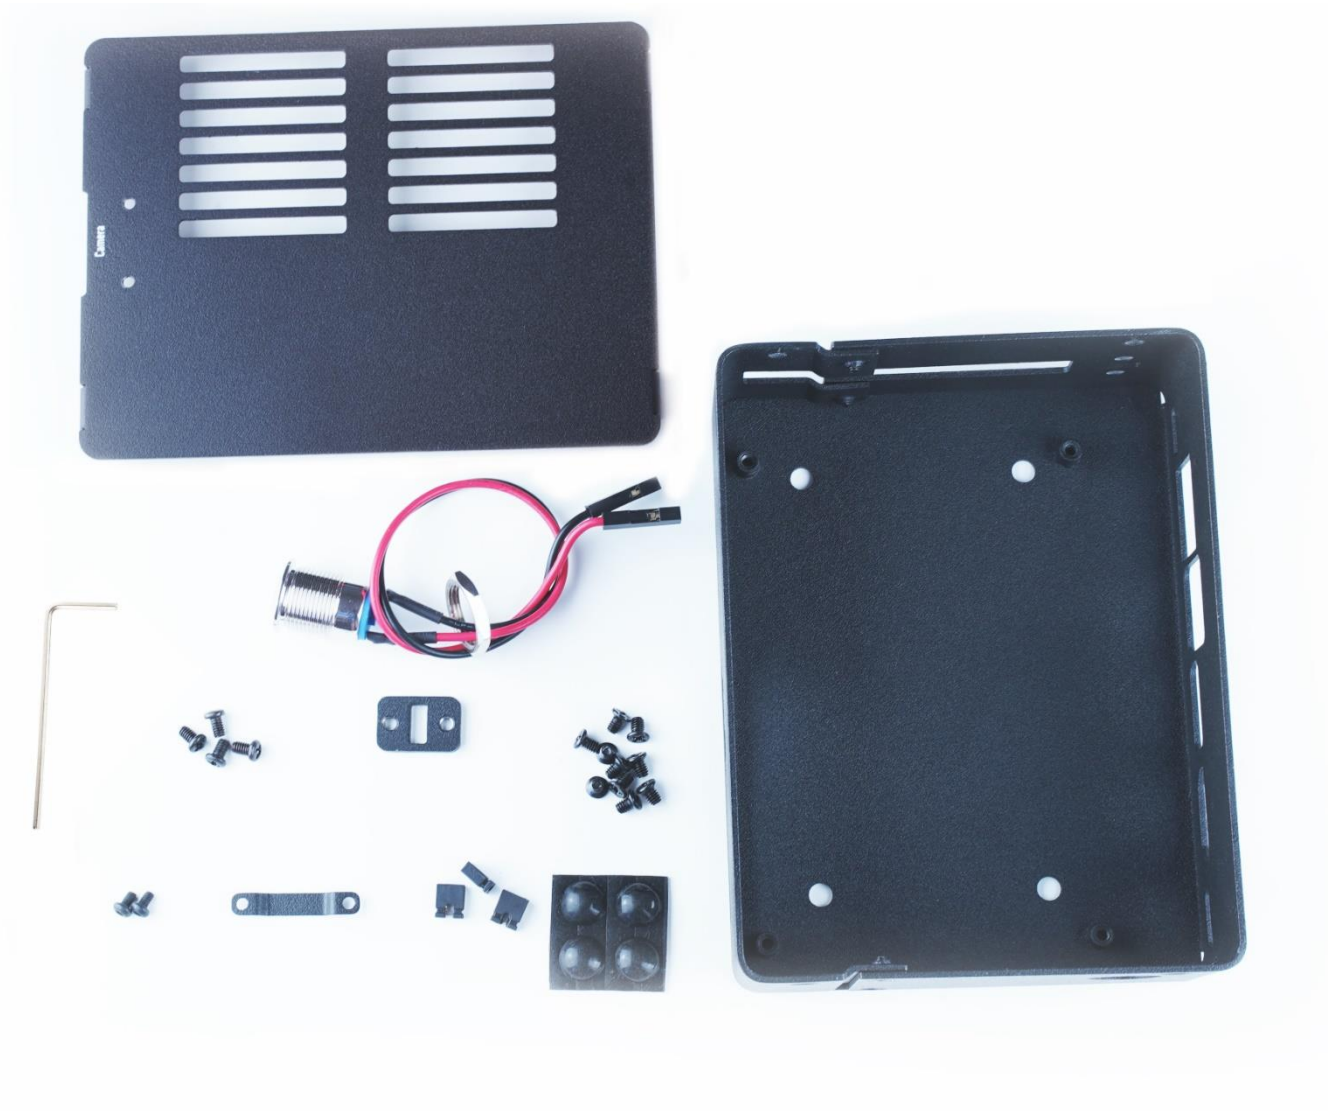

1. Mount the rubber feet



2. Mount the lock bracket




A






B

3. Remove the Jetson Nano Module


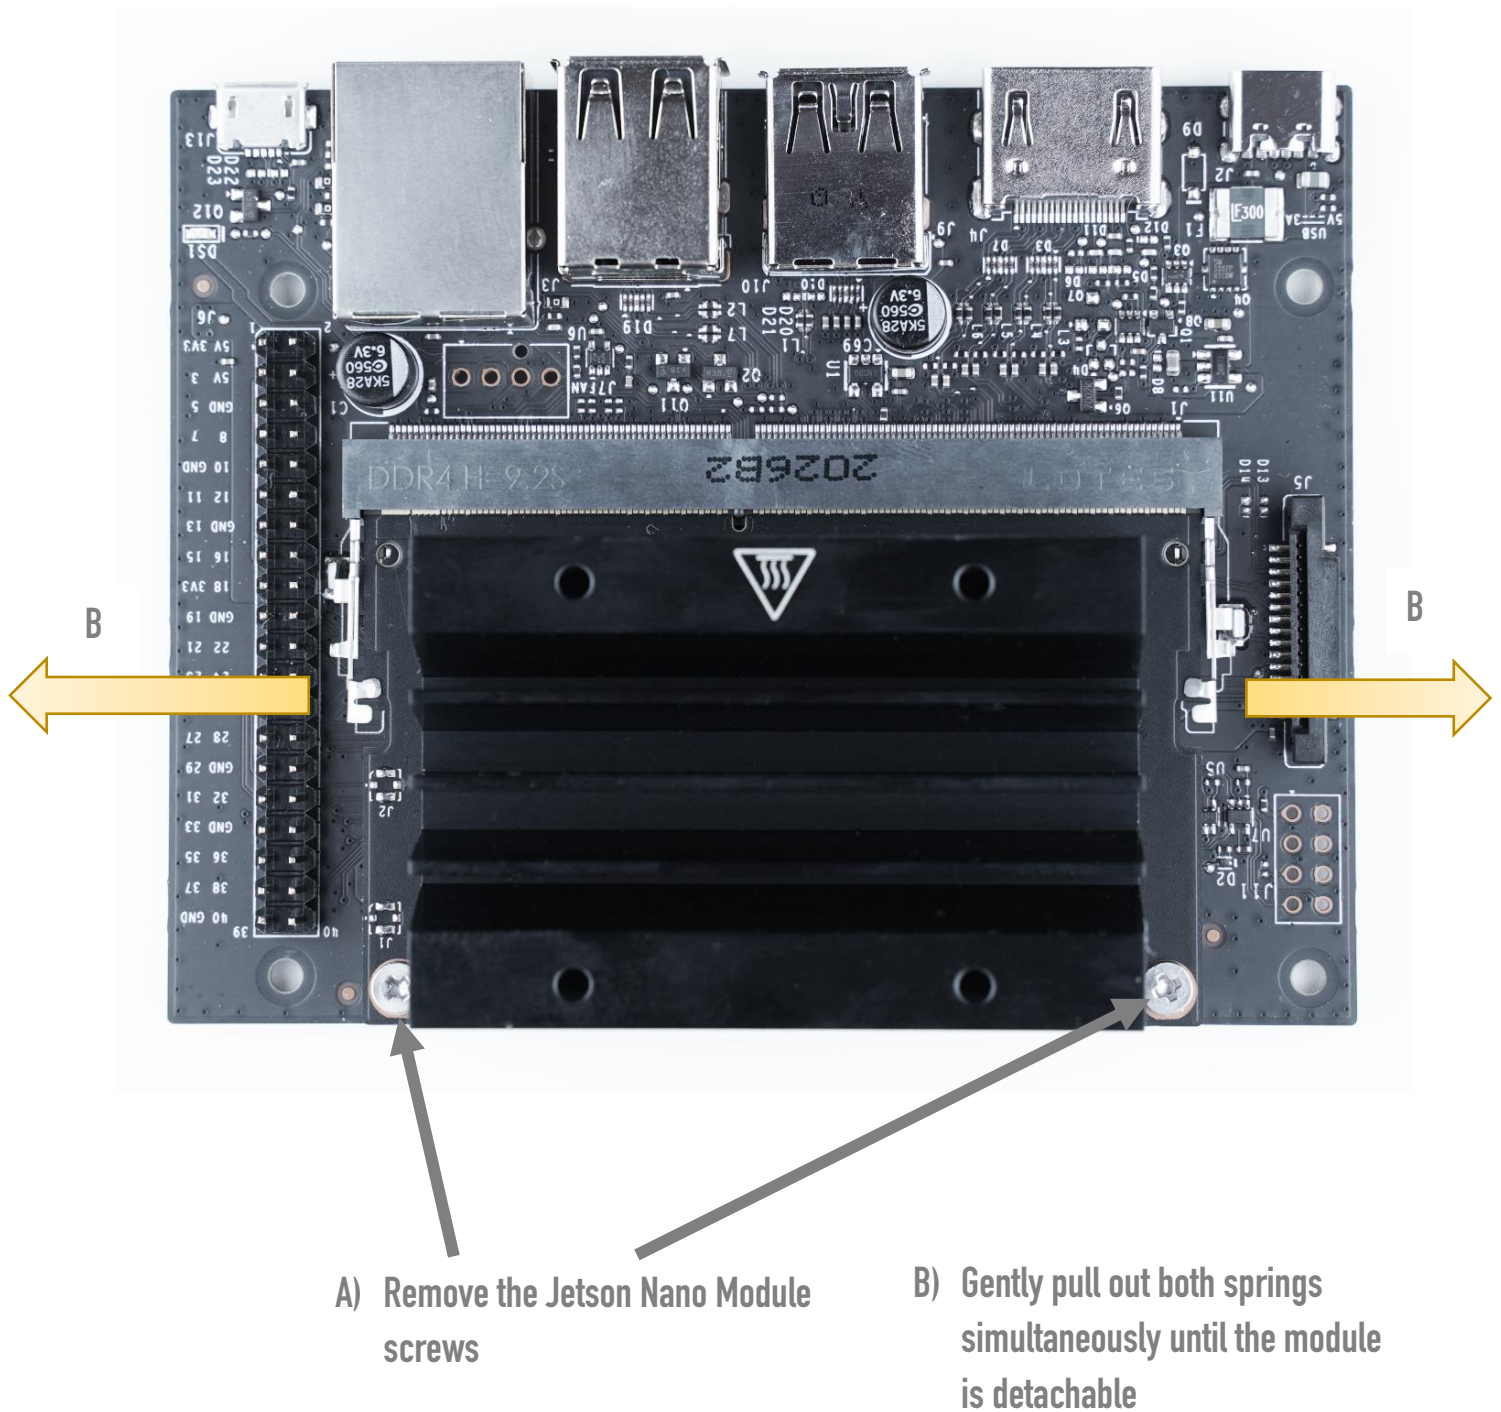


4. Mount the board into the case with the push button
Always make sure the Micro SD is not installed before put the Jeton nano board into the case!

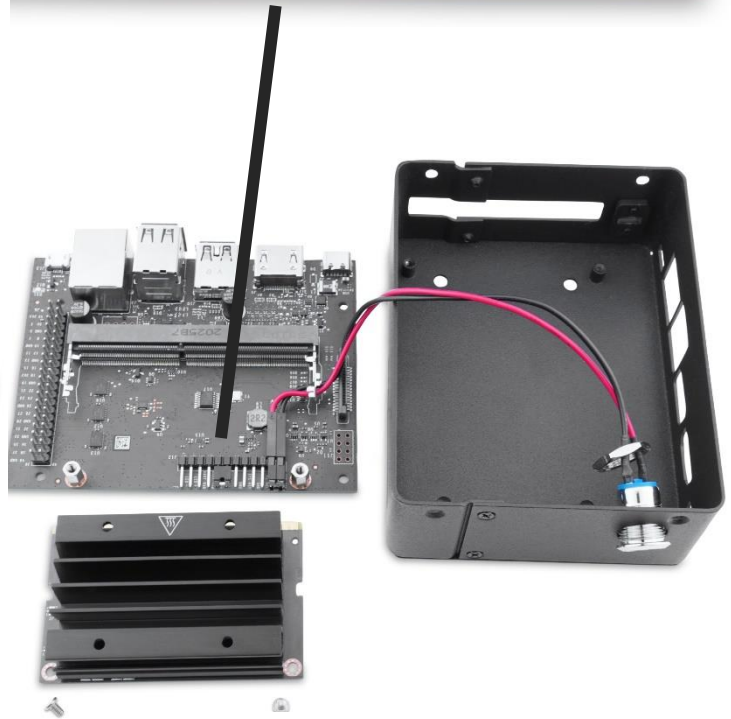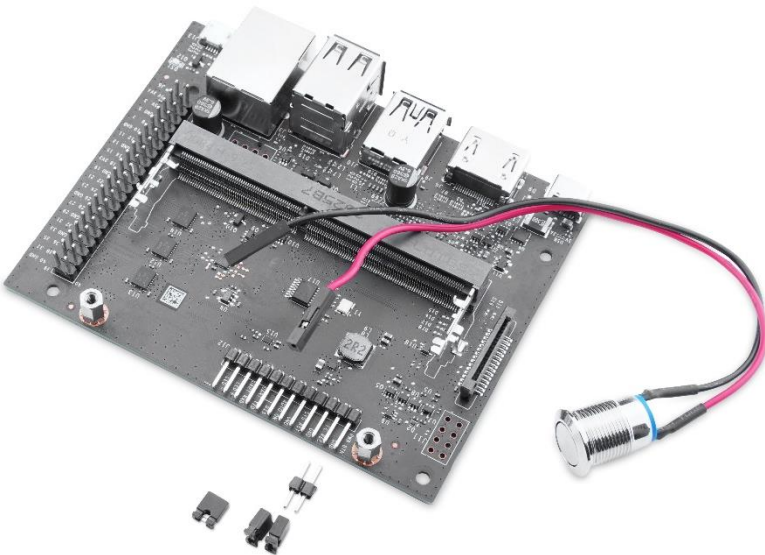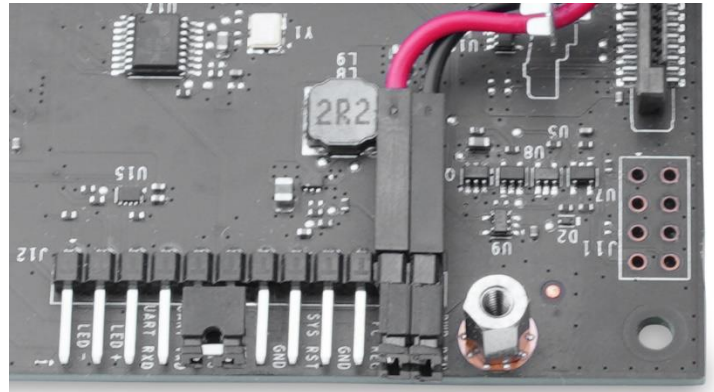


A) After Jetson Nano Module is removed

B) Wire according to the image

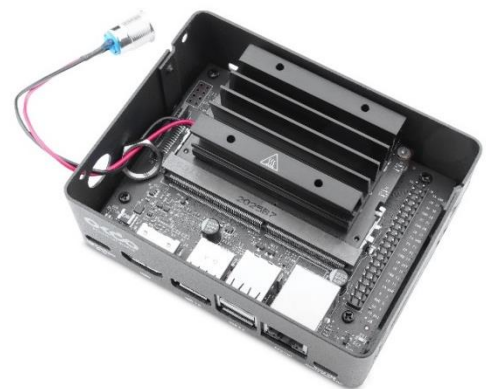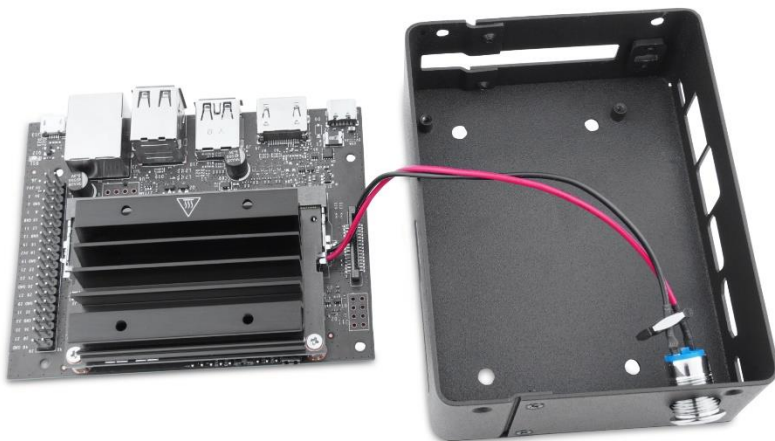

C) Mount the Module

D) Insert and mount the board into the case

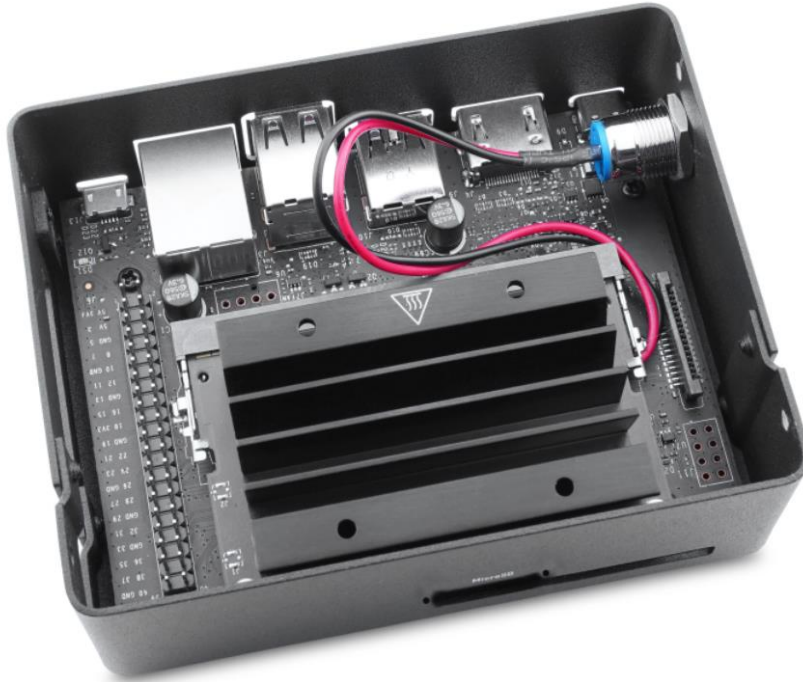

E) Secure the push button with the nut.

5. Install and secure Micro SD

(Always take out the Micro SD before take out the Jetson Nano board from the case!)





A



B

6. Put together the lid with the bottom

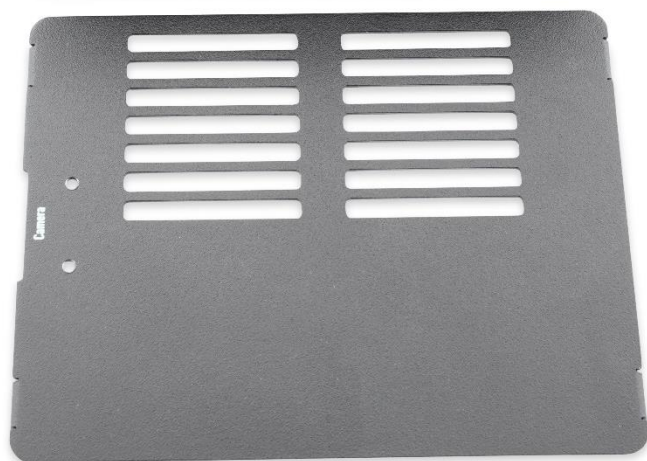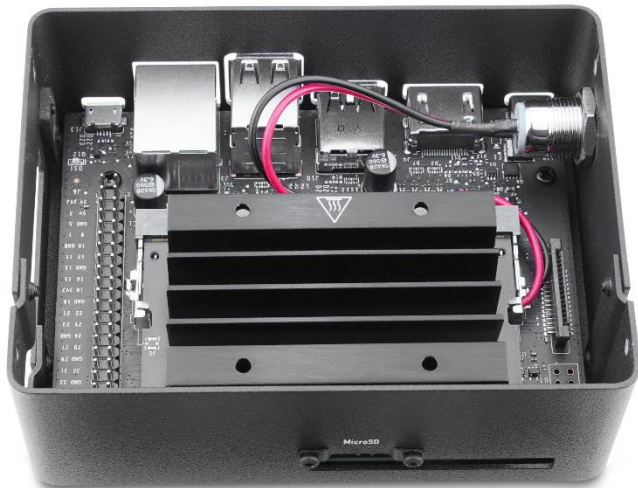

A



B

7. Mount the OKdo camera holder to the case



A



B



C